



MagnaVault TL30

Safe Operation Guide



MagnaVault TL30 Key Features

- UL TL30
- 120 minute Fire Protection
- Four-way Active Boltwork
- Four to Ten 1 ½" Locking Bolts
- Heavy Duty Pull Handle (except MV30 1114)
- 3 Spoke, Chrome Plated Handle



HAYMANTM
SAFE COMPANY

MagnaVault TL30

Mechanical Safe Lock (S&G 6651)

Operating Instructions:

1. Turn the dial counterclockwise (to the left) until the *first* number of your combination aligns with the 12 o'clock opening index 4 times, be sure to stop on the *first* number of your combination the fourth time.
2. Turn the dial clockwise (to the right) until the *second* number of your combination aligns with the 12 o'clock opening index 3 times, be sure to stop on the *second* number of your combination the third time.
3. Turn the dial counterclockwise (to the left) until the *third* number of your combination aligns with the 12 o'clock opening index 2 times, be sure to stop on the *third* number of your combination the second time.
4. Turn the dial clockwise (to the right) until the dial comes to a complete stop, and then turn the safe handle to gain access.
5. Locking your safe; Close the safe door and then rotate the safe dial to the left at least 4 full turns.

If you do not successfully gain access repeat steps 1-4.

Bolt Down Instructions:

Steps:

1. Place the safe in the location desired.
Note that it is desirable to have at least 1" clearance to the wall on the back and sides.
2. Mark the floor at the two front corners of the safe. This will help in relocating the safe after drilling the mount holes in the floor.
3. From inside the safe, mark the floor through the mount hole in the bottom of the safe.
4. Move the safe to the side and drill the floor at the mark with the masonry drill bit. Be sure to drill the holes deeper than the length of the anchor.
5. Vacuum the concrete dust out of and from around the holes in the floor.
6. Move the safe back into position using the corner marks to help align the safe.
7. Insert the anchor through the safe floor and into the concrete floor until the washer touches the safe floor, and then tighten the nut from inside the safe.

Tools you will need:

- Drill Motor
- Anchors
- Masonry Drill Bit
- Wrench to fit nuts on anchors
- Marker to mark the floor
- Vacuum



HAYMANTM
SAFE COMPANY

MagnaVault TL30

Electronic Safe Lock Operating Instructions:

Note:

*SecuRAM SafeLogic Locks have two factory default codes.

A Master Code of 111111 and a user code of 123456 are programmed into each lock. Both factory default codes will open the safe and **must** be changed before using your new safe.

To open your electronic lock, enter your 6 digit master or user code. The lock will beep one additional time indicating a correct code and the door can be opened.

If a wrong code is entered, the lock will beep two additional times indicating a wrong code.

If a wrong code is entered four times in a row, the lock will go into timeout mode for 5 minutes.

Wait for the timeout mode to expire and enter the correct code.

To change the Master or user code on the lock:

1. Write down your new code.
2. Open the door with the existing Master or user code and extend the bolts. Perform all lock service with the door open.
3. Enter 000000 (lock beeps one additional time).
4. Enter the existing Master or user code you wish to change (lock beeps one additional time).
5. Enter new code (lock beeps one additional time).
6. Enter new code again to verify (lock beeps one additional time).

Test the operation of the new code twice before closing the door.

Lastly, test the operation of the new code with the door closed.

Use only **FRESH** 9V Alkaline Batteries in the lock keypad.

For more detailed information on your SecuRAM SafeLogic lock visit www.securamsys.com.

Or for more information on these locks such as changing the batteries visit YouTube and go to the HAYMAN Safe Co Network.



Warranty

ONE YEAR WARRANTY

All Hayman Safe Company products carry a warranty to the original retail purchaser to be free from defects in material and workmanship. Standard production models are warranted for 1 year from the original date of purchase. This warranty applies only to new safes purchased from Hayman Safe Company or its authorized dealers. Proof of purchase must be provided so as to establish date of purchase and supplying dealer.

Hayman Safe Company will, at our option, replace or repair any defective part or unit. To obtain factory warranty service, please contact an authorized Hayman Safe dealer. Authorization must be received from Hayman Safe Company prior to performance of any service which will be submitted under warranty.

Improper installation, use, lack of proper maintenance or accidental damage will nullify this warranty. No other warranty, expressed or implied, is offered. This warranty cannot be changed, modified, enlarged or altered without direct written consent from Hayman Safe Company. Hayman Safe Company is not responsible for consequential damage, incidental expenses or personal injury. This warranty gives you specific legal rights, which vary from state to state.